
G25 backplate for Leo Bodnar's SLI-M display

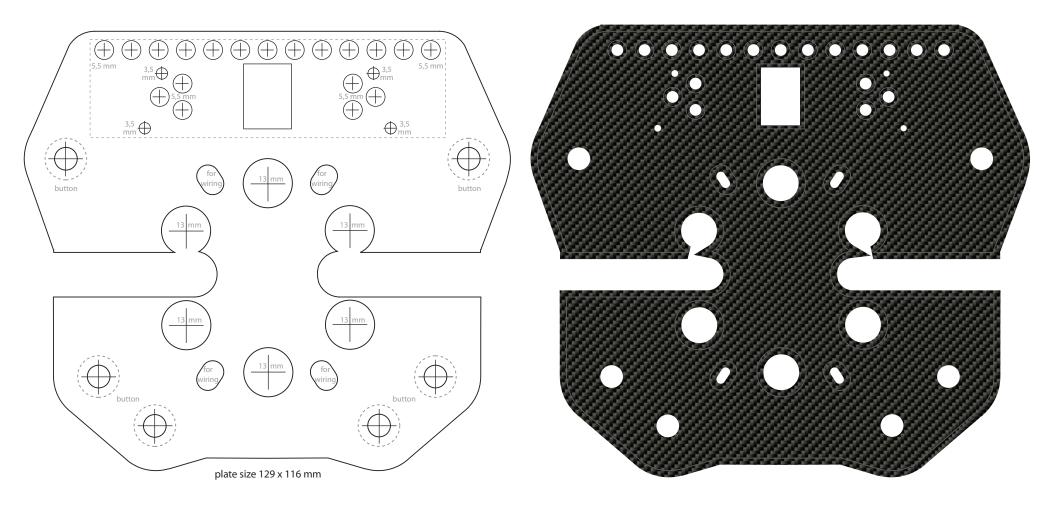

Backplate plan

Print this plan at 1:1 on normal paper
Stick firmly on desired material.
First drill all the holes.
Than cut out out the outer shape with a jigsaw.
Afterwards remove the paper plan.

Carbon effect decal

If real Carbon is too expensive or hard to get, use 2mm epoxy or aluminium plate.

Print this decal on photopaper, glue firmly on the finished plate.

Than cut out the excess paper off with a sharp hobby knive.

Use a black marker to mask the white papersides and edges.

You can spray some clear coat on the plate for final sweatproof finish.